

# ALPINE CONTEMPORARY



*Chesapeake Blend*




*South Bay Blend*


Multi-sized rectangular shapes with a smooth texture and slightly chamfered edges. Not recommended for vehicular applications.

**nicolock**<sup>®</sup>  
PAVING STONES • RETAINING WALLS • OUTDOOR LIVING  
 **paver-shield**<sup>™</sup>



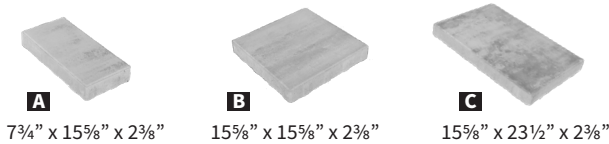

127 Sq Ft on Pallet  
80 Pcs on Pallet | A- 30 B- 30 C- 20  
Pallet Weight: 3,500 lbs

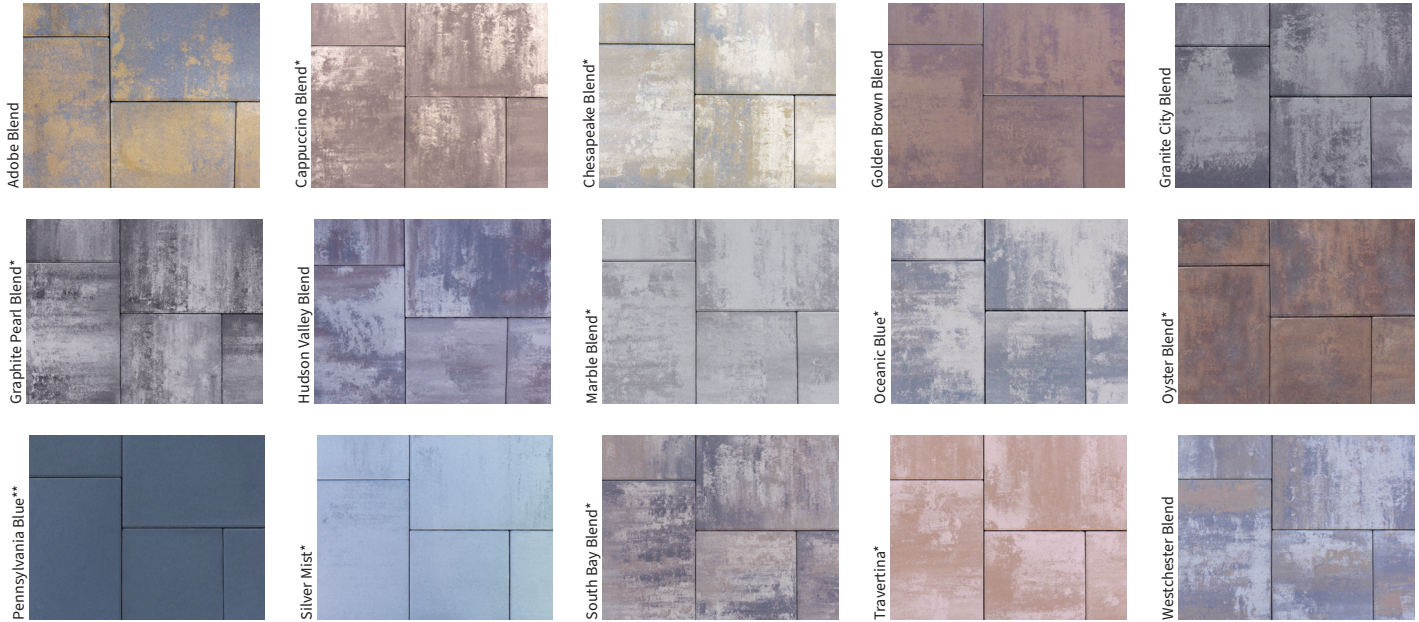


\*Premium Color  
\*\*Deluxe Color


#### INSTALLATION GUIDELINES: SAND

After excavation, compact the sub grade and install a woven separation fabric if needed. Spread and compact a base of clean, dense graded aggregate (road base). Typical compacted base thickness is 4-6" for pedestrian applications. Pavers are set on a loosely screened 1" bed of graded, clean concrete sand. Maintain a joint size of  $\frac{1}{16}" - \frac{3}{16}"$ . When pavers are set, compact paving stones into sand with mechanical plate vibrator. Joint sand may be spread over paving stones during compaction. Installed pavers should be set  $\frac{1}{8}"$  to  $\frac{1}{4}"$  above final elevations to compensate for any potential settlement. Spread clean dry sand over surface and broom sweep to fill joints. Run vibrator one final time after filling joints.

#### NICOLOCK PAVING STONE 1"- 3 $\frac{1}{8}"$ THICK

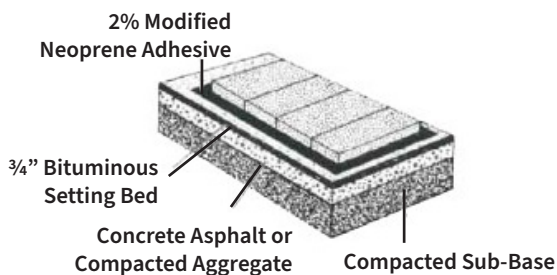

#### CROSS-SECTION OF TYPICAL INSTALLATION

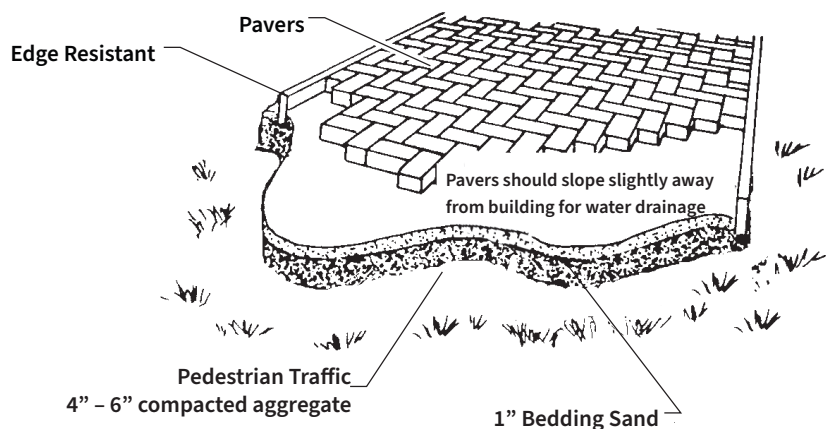

**NOTE:** All measurements are nominal. Variance in square footage or linear footage coverage can be up to 5% depending on joint width. The possible occurrence of efflorescence does not affect the structural integrity of the product. Efflorescence is a normal occurrence in concrete products and will dissipate with normal weathering. The use of concrete as a base or setting bed may increase the possibility of efflorescence.

**CAUTION:** Always use a plate compactor with a pad when installing any textured paving stone.